

EX-S3 User Documentation Files

- The EX-S3 user documentation available here has been divided among a number of files in order to facilitate downloading. You can download the entire manual, or you can save time by using the table of contents below to find specific information and then download only the files you need.

File 1 (File name : exs3_e_1.pdf)

2 INTRODUCTION

Unpacking	2
Features	9
Precautions	11
General Precautions	11
Data Error Precautions	12
Operating conditions	13
Condensation	13
LED Backlight	14
Lens	14
Other	14

15 QUICK START GUIDE

First, charge the battery!	15
To configure display language and clock settings	16
To record an image	17
To view a recorded image	17
To delete an image	18

19 GETTING READY

About This Manual	19
General Guide	20
Camera	20
USB Cradle	21
Monitor Screen Contents	22
REC mode	22
PLAY mode	23
Changing the Contents of the Monitor Screen	23
Indicator Lamps	24
Attaching the Strap	24
Power Requirements	25
To load the battery	25
To charge the battery	26
Power Supply Precautions	30
Turning the Camera On and Off	34
Auto Power Off (APO)	34
Using the On-screen Menus	35
Configuring Display Language and Clock Settings ...	38
To configure display language and clock settings	39

41 BASIC IMAGE RECORDING

Recording an Image	41
About the REC Mode Monitor Screen	42
Recording Precautions	43
Using Zoom	43
Using the Flash	45
Flash Precautions	46
Using the Self-timer	47
Specifying Image Size and Quality	49
To specify the image size	49
To specify image quality	50

File 2 (File name : exs3_e_2.pdf)

51 OTHER RECORDING FUNCTIONS

Exposure Compensation (EV Shift)	51
Adjusting White Balance	52
Adjusting White Balance Manually	53
Using the Best Shot Mode	54
Creating Your Own Best Shot Setup	56
Combining Shots of Two People into a Single Image (Coupling Shot)	58
Recording a Subject onto an Existing Background Image (Pre-shot)	60
Using the Movie Mode	62
Using the Histogram	63
REC Mode Camera Settings	65
Specifying ISO Sensitivity	65
Turning Image Review On and Off	66
Assigning Functions to the [◀] and [▶] Keys	66
Assigning Functions to the [▲] and [▼] Keys	67
Specifying Power On Default Settings	68
Resetting the Camera	69

File 3 (File name : exs3_e_3.pdf)

70 PLAYBACK

Basic Playback Operation	70
Flipping the Display	71
Zooming the Display Image	72
Resizing an Image	73
Cropping an Image	74
Playing a Movie	75
Displaying the Calendar Screen	76
Playing a Slide Show	77
To specify the slideshow images	79
To specify the slideshow time	80
To set the slideshow interval	80
Using the Photo Stand Feature	81
Rotating the Display Image	82

File 4 (File name : exs3_e_4.pdf)

83 DELETING FILES

Deleting a Single File	83
Deleting All Files	84

85 FILE MANAGEMENT

Folders	85
Memory Folders and Files	85
Protecting Files	86
To protect a single file	86
To protect all files in memory	87
DPOF	87
To configure print settings for a single image	88
To configure print settings for all images	89
PRINT Image Matching II	90
Exif Print	90
Using USB DIRECT-PRINT	91
Using the FAVORITE Folder	93
To copy a file to the FAVORITE folder	93
To display a file in the FAVORITE folder	94
To delete a file from the FAVORITE folder	95

97 OTHER SETTINGS

Turning the Key Tone On and Off	97
Specifying an Image for the Startup Screen	97
Specifying the File Name Serial Number Generation Method	98
Using the Alarm	99
To set an alarm	99
Stopping the Alarm	100
Setting the Clock	101
To select your Home Time zone	101
To set the current time and date	102
Changing the Date Format	102
Using World Time	103
To display the World Time screen	103
To configure World Time settings	103
To configure summer time (DST) settings	104
Changing the Display Language	105
Formatting Built-in Memory	106

File 5 (File name : exs3_e_5.pdf)

107 USING A MEMORY CARD

Using a Memory Card	108
To insert a memory card into the camera	108
To remove a memory card from the camera	108
Formatting a Memory Card	109
Memory Card Precautions	110
Copying Files	110
To copy all the files in built-in memory to a memory card	110
To copy a file from a memory card to built-in memory	111

112 VIEWING IMAGES ON A COMPUTER

Using the Camera with a Windows Computer	112
USB Connection Precautions	117
Using the Camera with a Macintosh Computer	117
USB Connection Precautions	122
Operations You Can Perform from Your Computer ..	122
Using a Memory Card to Transfer Images to a Computer	123
Memory Data	124
DCF Protocol	124
Memory Directory Structure	124
Image Files Supported by the Camera	125
Built-in Memory and Memory Card Precautions	126

127 USING THE CAMERA WITH A COMPUTER

Using the Album Feature	127
Creating an album	127
Selecting an Album Layout	128
Configuring Detailed Album Settings	129
Viewing Album Files	131
Saving an Album	134
Installing the Software from the CD-ROM	134
About the bundled CD-ROM	134
Computer System Requirements	135
Installing Software from the CD-ROM in Windows ...	136
Getting Started	136
Selecting a Language	136
Viewing the Contents of the "Read me" File	137
Installing an Application	137
Viewing User Documentation (PDF Files)	138
User Registration	138
Exiting the Menu Application	138
Installing Software from the CD-ROM on a Macintosh	139
Installing Software	139
Viewing User Documentation (PDF Files)	140

142 APPENDIX

Menu Reference	142
Indicator Lamp Reference	144
Camera Indicator Lamps	144
USB Cradle Indicator Lamps	146
Troubleshooting Guide	147
Display Messages	149
Specifications	150
Main Specifications	150